


Wilbert Precast Inc.'s Window Well step by step guide for installation.

INSTALLATION

1. Call for a Locate
2. Purchase Window
3. Cut the Foundation
4. Deliver and install Window Well
5. Backfill around the Window Well
6. Dispose of the cut out concrete foundation wall
7. Dispose of the extra soil not needed for backfilling
8. Line the window opening with treated lumber
9. Install the window
10. Trim the outside with cedar
11. Trim the inside
12. Paint or stain trim

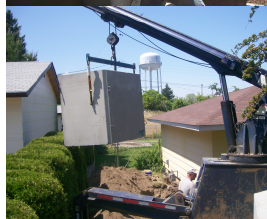

1.800.888.4573

wilbertprecast.com

INSTALLATION GUIDE

WINDOW WELLS

